

## MARKIII Electric Fire Pump Controller - Across The Line Starting

## **Project Information**

VOLTAGE/POWER TABLE								
LINE VOLTAGE	MOTOR HORSEPOWER							
208	5-30							
220-240	5-30							
380-400-415	5-60							
440-480	5-60							
600	5-75							

(DRAWINGS INCLUDED IN THIS PACKAGE ARE FOR STANDARD CONTROLLERS. ACTUAL "AS BUILT" DRAWINGS MAY DIFFER FROM THOSE SEEN HERE).

## Firetrol, Inc.

3412 Apex Peakway Apex, North Carolina 27502 P 919 460 5200 F 919 460 5250 www.firetrol.com

# Firetrol Mark<sup>III</sup> Electric Fire Pump Controller FTA1000 - Full Voltage Starting

Specifications

## 1.0 Main Fire Pump Controller

The main fire pump controller shall be a factory assembled, wired and tested unit. The controller shall be of the combined manual and automatic type designed for full voltage starting of the fire pump motor having the horsepower, voltage, phase and frequency rating shown on the plans and drawings.

## 1.1 Standards, Listings & Approvals

The controller shall conform to all the requirements of the latest editions of: NFPA 20, Standard for the Installation of Stationary Pumps for Fire Protection NFPA 70, National Electrical Code.

The controller shall be listed by:

Underwriters Laboratories, Inc., in accordance with UL218, Standard for Fire Pump Controllers Canadian Standards Association CSA-C22.2, Standard for Industrial Control Equipment (cUL)

CE - Low Voltage Directive

The controller shall be approved by:

Factory Mutual (IEC 62091)

The City of New York for fire pump service

## 1.2 Enclosure

The controller components shall be housed in a NEMA Type 2 (IEC IP22) drip-proof, wall mounted enclosure with bottom entry gland plate and lifting lugs.

## 1.3 Withstand Ratings (Short Circuit Current Ratings)

All controller components shall be front mounted, wired and front accessible for maintenance. The available short circuit current ratings are shown below.

Code	200-208V 5-150 HP		20-240V -200 HP		-415V	440-48 5-400		550-600
				5-350 HP				5-500 HP
M - Standard	100kA		100kA	10	0kA	100k <i>A</i>	1	N/A
N - Intermediate	150kA		150kA	15	0kA	150k <i>A</i>	7	N/A
P - High	200kA		200kA	20	0kA	200k	4	N/A
Q - Intermediate	N/A		N/A	N	I/A	N/A		100kA
R - Standard	N/A		N/A	N/A		N/A		50kA
	200-208V		220-24	·0V	380-	-415V	_	440-480
Code	200 HP		250-400	) HP	400-!	500 HP	45	50-500 HP
M - Standard	50A		50kA	5		OkA		50kA
N - Intermediate	N/A		N/A		N	I/A		N/A
P - High	100kA		100k <i>A</i>	4	100kA			100kA
Q - Intermediate	N/A		N/A		N	I/A		N/A
R - Standard	N/A		N/A		N/A		N/A	

## 1.4 Power Components

The controller shall include a combination isolating disconnect switch/circuit breaker, rated for not less than 115% of the motor full load current, mechanically interlocked and operated with a single, externally mounted handle. The isolating disconnect switch/ circuit breaker shall be mechanically interlocked so that the enclosure door cannot be opened with the handle in the ON position except by a hidden tool operated bypass mechanism. The isolating disconnect switch/circuit breaker shall be capable of being padlocked in the OFF position for installation and maintenance safety, and shall also be capable of being locked in the ON position without affecting the tripping characteristics of the circuit breaker.

The controller will include a voltage surge arrestor and Across the Line motor starter. The controller shall be equipped with a single handle, manually operated, emergency start mechanism capable of being latched in the ON position.

## 1.5 Operator Interface (HMI)

The operator interface shall be a 7.0" LCD color touch screen (HMI technology) powered by an embedded microcomputer with software PLC logic. Included shall be keypad type push-buttons for START, STOP and TEST.

The screen shall include menus for: Home · Alarms · Configuration · History · Service · Manuals · Language.

The HMI shall graphically display the following: Voltage and Amperage of all 3 phases simultaneously using true RMS Technology · Motor Stopped/Running · Starting Cause · Actuation Mode · Controller Type · Shutdown Mode · Date & Time · Pump Room Temp. · System Pressure

System pressure shall be capable of being displayed as: PSI, kPa, Bar, Feet of Head or Meters of Water.

The HMI shall allow programming and display of: Cut In & Cut Out Pressure Settings · Minimum Run Timer · Sequential Start Timer · Periodic Test Timer

The HMI allows the user to select the language of the system and download the manual or view the manual on screen.

#### 1.6 State and Alarm Indication

Visual indication shall be provided for the following:

Power Available • Motor Run • Periodic Test • Manual Start • Deluge Valve Start • Remote Automatic Start • Remote Manual Start • Emergency Start • Pump On Demand/Automatic Start • Pump Room Temperature • Lockout

The digital display shall visually indicate the following alarms:

• Locked Rotor Current • Fail To Start • Under/Over Current • Under/Over Voltage • Phase Unbalance • Check Test Solenoid Valve • Weekly Test Cut-In Not Reached • Transducer Fault • Control Voltage Not Healthy • Motor Trouble • Pump Room Alarm • Invalid Cut-In • Phase Reversal • Power Loss • Phase Loss L1 / L2 / L3 • Low Water Level • Pump On Demand • Low Ambient Temp. • Service Required

Audible and visible alarm shall be provided for: Fail To Start

Remote Alarm contacts shall be provided for:

Power Available • Phase Reversal • Motor Run • Common Pump Room Alarm (Overvoltage, Undervoltage, Phase Unbalance, Low/High Pump Room Temperature) • Common Motor Trouble (Overcurrent, Fail To Start, Undercurrent, Ground Fault)

## 1.7 Pressure and Event Recording

The system shall be capable of logging pressure data and operational events with time/date stamp. The system shall display operational events for the lifetime of the controller and display the pressure data in text or graphical form. The controller shall log the Date/Time of the first start-up and the controller total power on time from that date. The controller shall log first and last statistics for: First Setup · On Time · Start Count · Last Start Time · Min/Max/Average System Pressure · Min/Max/Average Pump Room Temp. · Jockey Pump On Time/Start Count/Last Start Time · Phase to Phase Voltages with Date Stamp · Amps Per Phase with Date Stamp

#### 1.8 USB Host Controller

A USB port capable of accepting a USB Flash Memory Disk shall be provided for downloading pressure and event logs.

### 1.9 Serial Communications

The controller shall feature Modbus with TCP/IP frame format and shielded female RJ45 connector

## 2.0 Pressure Sensing / Wet Parts

The controller shall be supplied with a solid state pressure transducer with a range of 0-500 psi calibrated for 0-300 psi (0-20.7 bar) and a run test solenoid valve. The wet parts shall be externally mounted and include a protective cover. The pressure sensing line connection to the transducer shall be 1/2-inch FNPT. Provisions for a redundant pressure transducer shall be provided.

#### 2.1 Seismic Certification

The controller shall be certified to meet or exceed the requirements of the 2015 International Building Code, the 2016 California Building Code and OSHPD Special Seismic Certification Preapproval - OSP. The controller test criteria shall be per ICC-ES AC156 and the Seismic Parameters per ASCE 7-10 Chapter 13.

## 2.2 Controller Operation

The controller shall be capable of automatic starting via pressure drop, remote start signal from an automatic device or a deluge valve. The controller can be manually started via the START push-button, the RUN TEST push-button, or a remote signal from a manual device. Stopping can be achieved manually with the STOP push-button or automatically after expiration of minimum run timer or test timer. The minimum run timer (off delay), sequential start timer (on delay) and periodic test timer shall be field adjustable and include a visual countdown on the display.

### 2.3 Manufacturer

The controller shall be a Firetrol brand.



## MARKIII Electric Fire Pump Controllers - Across The Line Starting



**Description** – Firetrol\* FTA1000 Full Voltage Fire Pump Controllers are intended for use with electric motor driven fire pumps where the capacity of the power source permits full voltage starting. Full voltage is applied to the motor as soon as the controller is actuated. The controller monitors, displays and records fire pump system information.

Full voltage starting is simple and low cost and is preferred whenever the utility or emergency generator set will permit this type of starting.

Approvals – Firetrol fire pump controllers are listed by Underwriters' Laboratories, Inc., in accordance with UL218, Standard for Fire Pump Controllers, CSA, Standard for Industrial Control Equipment, and approved by Factory Mutual. They are built to meet or exceed the requirements of the approving authorities as well as NEMA and the latest editions of NFPA 20, Installation of Centrifugal Fire Pumps, and NFPA 70, National Electrical Code.

**Standard Features** — The following are included as standard with each controller:

- · Voltage surge protector
- Main Disconnect Switch sized for connected motor horsepower and voltage
- Fire pump Circuit Breaker
- Single Handle Isolating Disconnect Switch/ Circuit Breaker mechanism
- Motor contactor
- Single Handle Emergency Manual Run Mechanism to mechanically close motor contactor contacts in an emergency condition
- Built-in Start and Stop push-buttons to bypass automatic start circuits
- · Daylight Savings Time Option
- Elapsed Time Meter

- 7.0" LCD color touch screen (HMI technology) software upgradeable operator interface powered by an embedded microcomputer with software PLC logic.
- 500 PSI Pressure Transducer (calibrated for 300 PSI (20.7 Bar))and Test Solenoid for fresh water applications, externally mounted with protective cover
- Audible Alarm Bell
- Pump Room Ambient Temperature Switch, Display and Alarms
- Pressure and Event Recording with Date Stamp to System Memory Accessible VIA The User Interface and Downloadable to a USB Flash Drive
- Modbus Communications with TCP/IP frame format and a shielded female RJ45 connector
- NEMA Type 2 (IEC IP22) enclosure
- · Suitablé for use as Service Equipment
- The controller supplies visual indication of the following: Power Available • Motor Run • Periodic Test • Manual Start • Deluge Valve Start • Remote Automatic Start • Remote Manual Start • Emergency Start • Pump On Demand (Automatic Start) • Low Discharge Pressure • Pump Room Temp. • Lockout
- The controller displays visual indication for the following alarm conditions: Control Voltage Not Healthy Fail To Start Invalid Cut-In Lock Rotor Current Loss of Power Low Ambient Temp. Low Water Level Motor Trouble Phase Reversal Overcurrent Overvoltage Phase Loss L1 / L2 / L3 Phase Unbalanced Pressure Transducer Fault Detected Pump On Demand Pump Room Alarm Service Required Undercurrent Undervoltage Check Test Solenoid Weekly Test Cut-In Reached
- · Audible and Visible Indication for Fail To Start.
- DPDT 8A, 250VAC remote alarm contacts are provided for: Power Available • Phase Reversal
   Motor Run
- Common Pump Room Alarm (Overvoltage / Undervoltage / Phase Unbalance / Low Pump Room Temp. / High Pump Room Temp)
- Common Motor Trouble (Overcurrent / Fail To Start / Undercurrent / Ground Fault)
- Field Adustable Timers with Visual Countdown for Minimum Run (Off Delay), Sequential Start (On Delay) and Weekly Test
- Seismic Certification per IBC 2015, CBC 2016 (Consult Factory for Verification)

## Product Description - Options & Modifications

#### SPECIAL ENCLOSURES

- Enclosure, NEMA Type 4 (IP66), Painted Steel
- -F Enclosure, NEMA Type 4X (IP66), #304 Stainless Steel, **Brushed Finish**
- Enclosure, NEMA Type 4X (IP66), #316 Stainless Steel, **Brushed Finish**
- -FDB Enclosure, NEMA Type 4X (IP66), #316 Stainless Steel, 12 Gauge, Seam-Welded, Brushed Finish
- -FDP Enclosure, NEMA Type 4X (IP66), #316 Stainless Steel, Painted Finish
- Enclosure, NEMA Type 4X (IP66), #304 Stainless Steel, -FXP Painted Finish
- Enclosure, NEMA Type 12 (IP54), Painted Steel Enclosure, NEMA Type 3R (IP24), Painted Steel -G
- -T
- Enclosure, NEMA Type 3 (IP54), Painted Steel -U

#### **CIRCUIT BREAKER OPTION**

- Intermediate withstand rating 150,000 Amps RMS Sym. (200-480V) - 100,000 Amps RMS Sym. (550-600V)
- High withstand rating -P 200,000 Amps RMS Sym (200-480V)
- Note: Intermediate and High withstand ratings may not be available for all horsepowers and voltages. Consult factory for availability.

#### ANTI-CONDENSATION SPACE HEATERS

- Space Heater, 120V Externally Powered with Circuit Breaker and Thermostat
- -K Space Heater, 120V Externally Powered with Circuit Breaker and Humidistat
- -M Space Heater, 240V Externally Powered with Circuit Breaker and Thermostat
- Space Heater, 240V Externally Powered with Circuit -NBreaker and Humidistat
- -JKP Space Heater, 120V Externally Powered with Circuit Breaker and Thermostat and Humidistat in Parallel
- Space Heater, 240V Externally Powered with Circuit -MNP Breaker and Thermostat and Humidistat in Parallel

#### Pressure Transducers, Solenoid Valves, Plumbing

- Wetted Parts Including Pressure Sensor and Test Solenoid, 500 PSI (34.5 Bar), Sea Water
- Low Suction Pressure Transducer, Fresh Water, 0-300 -SX1 PSI (20.4 Bar) with Visible Indication and Output Contacts
- -SX2 Low Suction Pressure Transducer, Sea Water, 0-300 PSI (20.4 Bar) with Visible Indication and Output Contacts

#### COMBINED AUTOMATIC POWER TRANSFER SWITCHES

- -TSA FTA950 Automatic Transfer Switch (See Pub. PD1000-61)
- -TSAB FTA951 Automatic Transfer Switch, J-Bypass Isolation

#### **ALARMS**

- Alarm Output Contacts Extra, Pump Operating (1 -AC Form A, 1 Form B)
- -AM Alarm Output Contacts, Fail to Start
- Alarm Output Contacts, Low Pump Room Tempera--AV ture (Requires option -AF)
- Alarm Output Contacts, Reservoir Low  $-\Delta W$ (Requires option -AG)
- Configurable Low Suction Pressure, Visible/Output Contacts with external digital input
- -BW1 Extra Alarm Output Contacts, Phase Failure/Phase Reversal

- Alarm Output Contacts, Overcurrent
- Configurable Low Suction Pressure, Visible/Output Contacts with Suction Pressure Transducer
- -FH1 Alarm, Visible/Output Contacts, Main Relief Valve Open
- Alarm Visible/Output Contacts, Flow Meter Open -FK
- -JR Visible Indicator, Jockey Pump Operating
- Alarm, Audible/Visible, Jockey Pump Trouble -JT
- -K1H Alarm Output Contacts, Common Alarm -I Y
- Alarm Output Contacts, Pump On Demand Alarm, Audible/Visible, Built-In 120V Supervisory -P

System (Includes visible supervisory voltage normal indication and audible pump operating, phase failure and phase reversal indication)

Alarm, Audible/Visible, Built-in 240V Supervisory System (Includes visible supervisory voltage normal indication and audible pump operating, phase failure and phase reversal indication)

#### MISCELLANEOUS

- Series Pumping Operation, High Zone Controller -FI
- -EM Series Pumping Operation, Mid Zone Controller
- Series Pumping Operation, Low Zone Controller -FN
- -IEC Marking, CE with External Wet Parts
- -MZN Neutral Lug, Service Entrance, Non-insulated Bonded to Enclosure
- -PK Terminal Blocks, Extra Remote Start
- -PY Output Contacts, Motor Space Heater Circuit, Externally Powered
- -S Tropicalization
- -USBX Data Port, External USB
- -ZPM1 Data Port, RS485 Modbus RTU

Export packaging (Wooden crating to conform to IPPC Standards) FTA1000 - 1930

## **F**iretrol, Inc.

3412 Apex Peakway Apex, North Carolina 27502 P +1 919 460 5200 F +1 919 460 5250 www.firetrol.com

## Model Number Selection Guide



## MARKIII Electric Fire Pump Controllers

# FTA1000, 1250, 1300, 1350, 1800, 1930 ELECTRIC FIRE PUMP CONTROLLERS

Example: FTA<u>1300</u>-<u>А</u><u>М</u>7<u>5</u><u>Н</u>H-<u>хх</u>

#### Starting Method

1000 - Across-the-line (direct on line)

1250 - Part Winding (50%-50% windings)

1300 - Wye-delta (star-delta), open transition

1350 - Wye-delta (star-delta), closed transition

1800 - Autotransformer

1930 - Digital Solid-state soft start/stop

#### Start/Stop Options

- A Automatic start with timed permissive stop after minimum run time and manual start with manual stop, field convertible to automatic start and manual start with manual stop only
- B Automatic start and manual start with manual stop
- C Manual start and stop

#### **Short Circuit Current Rating**

Code	200-208V	2:	20-240V	380	-415V	440-48	0V	550-600V
	5-150 HP	5	-200 HP	5-3	50 HP	5-400	ΗP	5-500 HP
M - Standard	100kA		100kA	10	0kA	100k <i>A</i>	4	N/A
N - Intermediate	150kA		150kA	15	0kA	150k <i>A</i>	4	N/A
P - High	200kA		200kA	20	0kA	200k	4	N/A
Q - Intermediate	N/A		N/A	N	I/A	N/A		100kA
R - Standard	N/A		N/A	N	I/A	N/A		50kA
	200-208V		220-24	.0V	380-	-415V	4	40-480V
Code	200 HP		250-400	) HP   400-		500 HP	45	50-500 HP
M - Standard	50A		50kA	١	50	OkA		50kA
N - Intermediate	N/A		N/A		N	I/A		N/A
P - High	100kA		100k <i>A</i>	4	10	0kA		100kA
Q - Intermediate	N/A		N/A		N	I/A		N/A
R - Standard	N/A		N/A		N/A		N/A	

Modifications See Back

### Three Phase Voltage

A - 220-240 Volt, 60 Hertz (230 V)

AZ - 220-230 Volt, 50 Hertz

B - 440-480 Volt, 60 Hertz (460 V)

BZ - 415 Volt, 50 Hertz

C - 550-600 Volt, 60 Hertz (575 V)

F - 380 Volt, 60 Hertz FZ - 380 Volt, 50 Hertz

FF - 400 Volt, 60 Hertz

FX - 400 Volt, 50 Hertz

H - 208 Volt, 60 Hertz HH - 200 Volt, 60 Hertz

Horsepower Rating 03 - 3 HP 100 - 100 HP 05 - 5 HP 125 - 125 HP 07 - 7 1/2 HP 150 - 150 HP 10 - 10 HP 200 - 200 HP 15 - 15 HP 250 - 250 HP 20 - 20 HP 300 - 300 HP 25 - 25 HP 350 - 350 HP 400 - 400 HP 30 - 30 HP 40 - 40 HP 450 - 450 HP

500 - 500 HP

50 - 50 HP 60 - 60 HP

75 - 75 HP

## Model Number Selection Guide - Options & Modifications

#### SPECIAL ENCLOSURES

- Enclosure, NEMA Type 4 (IP66), Painted Steel
- -F Enclosure, NEMA Type 4X (IP66), #304 Stainless Steel, **Brushed Finish**
- Enclosure, NEMA Type 4X (IP66), #316 Stainless Steel, Brushed Finish
- -FDB Enclosure, NEMA Type 4X (IP66), #316 Stainless Steel, 12 Gauge, Seam-Welded, Brushed Finish
- Enclosure, NEMA Type 4X (IP66), #316 Stainless Steel, Painted Finish
- Enclosure, NEMA Type 4X (IP66), #304 Stainless Steel, -FXP Painted Finish
- Enclosure, NEMA Type 12 (IP54), Painted Steel Enclosure, NEMA Type 3R (IP24), Painted Steel -G
- -T
- Enclosure, NEMA Type 3 (IP54), Painted Steel -l J

#### CIRCUIT BREAKER OPTION

- Intermediate withstand rating 150,000 Amps RMS Sym. (200-480V) - 100,000 Amps RMS Sym. (550-600V)
- High withstand rating 200,000 Amps RMS Sym (200-480V)
- Note: Intermediate and High withstand ratings may not be available for all horsepowers and voltages. Consult factory for availability.

#### ANTI-CONDENSATION SPACE HEATERS

- Space Heater, 120V Externally Powered with Circuit Breaker and Thermostat
- Space Heater, 120V Externally Powered with Circuit -K Breaker and Humidistat
- Space Heater, 240V Externally Powered with Circuit -M Breaker and Thermostat
- Space Heater, 240V Externally Powered with Circuit -N Breaker and Humidistat
- -JKP Space Heater, 120V Externally Powered with Circuit Breaker and Thermostat and Humidistat in Parallel
- Space Heater, 240V Externally Powered with Circuit Breaker and Thermostat and Humidistat in Parallel

#### Pressure Transducers, Solenoid Valves, Plumbing

- Wetted Parts Including Pressure Sensor and Test Solenoid, 500 PSI (34.5 Bar), Sea Water
- Low Suction Pressure Transducer, Fresh Water, 0-300 PSI (20.4 Bar) with Visible Indication and Output
- -SX2 Low Suction Pressure Transducer, Sea Water, 0-300 PSI (20.4 Bar) with Visible Indication and Output Contacts

#### COMBINED AUTOMATIC POWER TRANSFER SWITCHES

- -TSA FTA950 Automatic Transfer Switch (See Pub. PD1000-61)
- -TSAB FTA951 Automatic Transfer Switch, J-Bypass Isolation

#### ALARMS

- -AC Alarm Output Contacts Extra, Pump Operating (1 Form A, 1 Form B)
- Alarm Output Contacts, Fail to Start -AM
- -AV Alarm Output Contacts, Low Pump Room Temperature (Requires option -AF)
- Alarm Output Contacts, Reservoir Low (Requires option -AG)
- Configurable Low Suction Pressure, Visible/Output Contacts with external digital input
- Extra Alarm Output Contacts, Phase Failure/Phase

## Firetrol, Inc.

3412 Apex Peakway Apex, North Carolina 27502 P +1 919 460 5200 F +1 919 460 5250

- Reversal
- -RV1 Alarm Output Contacts, Overcurrent
- Configurable Low Suction Pressure, Visible/Output -CTS1 Contacts with Suction Pressure Transducer
- Alarm, Visible/Output Contacts, Main Relief Valve
- -EK1 Alarm Visible/Output Contacts, Flow Meter Open
- Visible Indicator, Jockey Pump Operating -JR
- Alarm, Audible/Visible, Jockey Pump Trouble -JT Alarm Output Contacts, Common Alarm -KH
- Alarm Output Contacts, Pump On Demand -I Y
- Alarm, Audible/Visible, Built-In 120V Supervisory -P System (Includes visible supervisory voltage normal indication and audible pump operating, phase failure and phase reversal indication)
- Alarm, Audible/Visible, Built-in 240V Supervisory System (Includes visible supervisory voltage normal indication and audible pump operating, phase failure and phase reversal indication)


#### **MISCELLANEOUS**


- Series Pumping Operation, High Zone Controller
- -EM Series Pumping Operation, Mid Zone Controller
- -EN Series Pumping Operation, Low Zone Controller
- Marking, CE with External Wet Parts -IEC
- -MZN Neutral Lug, Service Entrance, Non-insulated Bonded to Enclosure
- Terminal Blocks, Extra Remote Start
- -PY Output Contacts, Motor Space Heater Circuit, Externally Powered
- -5 Tropicalization
- -USBX Data Port, External USB
- -ZPM1 Data Port, RS485 Modbus RTU

Export packaging (Wooden crating to conform to IPPC Standards) FTA1000 - 1930



## Mark<sup>III</sup> Electric Fire Pump Controllers - Across The Line Starting

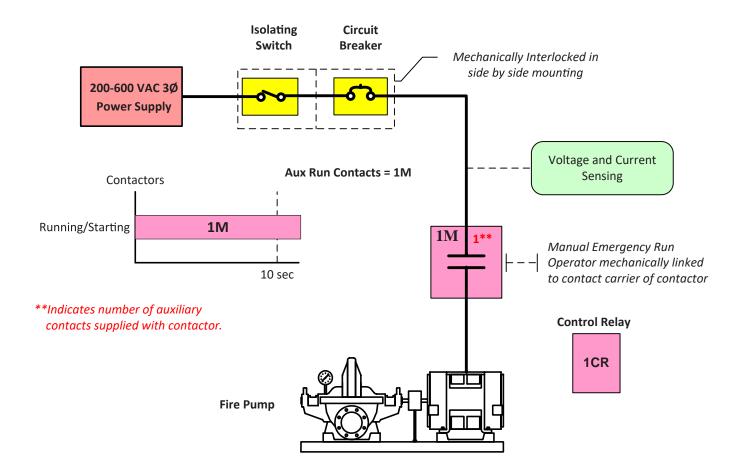

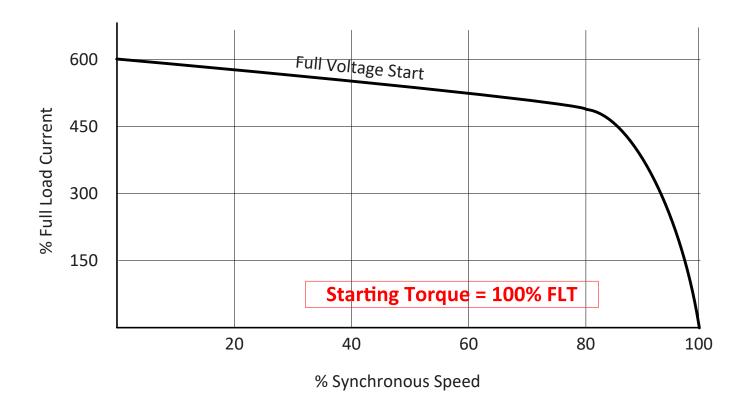


## Firetrol, Inc.

3412 Apex Peakway Apex, North Carolina 27502 P +1 919 460 5200 F +1 919 460 5250 www.firetrol.com



## MARKIII Electric Fire Pump Controllers - Across The Line Starting

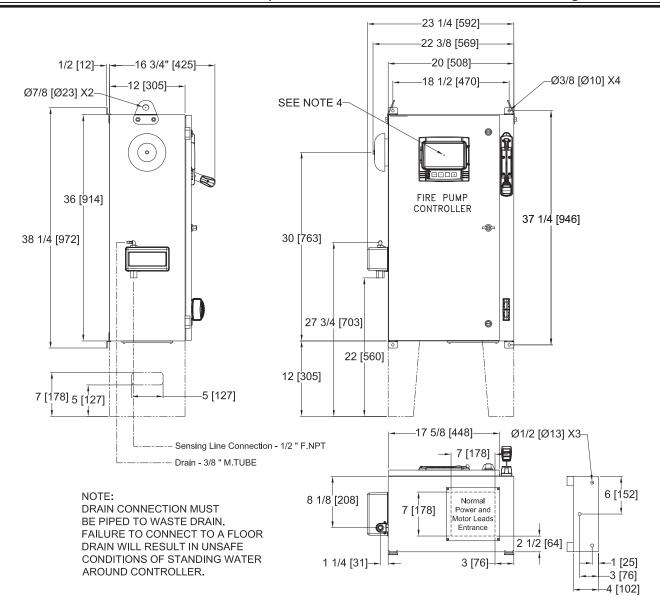

VOLTAG	E/POWER TABLE							
LINE VOLTAGE	MOTOR HORSEPOWER							
208	5-30							
220-240	5-30							
380-400-415	5-60							
440-480	5-60							
600	5-75							
APPROX SHIPPING WT: 170 [77]								

#### NOTES:

- 1. STANDARD: NEMA 2
- 2. STANDARD PAINT: TEXTURED RED RAL3002
- 3. ALL DIMENSIONS IN INCHES [MILLIMETERS] SHIPPING WEIGHT IN POUNDS [KG]
- 4. CENTER OF MARK III SCREEN: 29 5/8 [751] FROM BOTTOM OF ENCLOSURE (NO FEET)
- 5. BOTTOM CONDUIT ENTRANCE THROUGH REMOVABLE GLAND PLATE RECOMMENDED
- 6. USE WATERTIGHT CONDUIT AND CONNECTOR ONLY
- 7. PROTECT EQUIPMENT AGAINST DRILLING CHIPS
- 8. DOOR SWING EQUAL TO DOOR WIDTH
- DRAWINGS FOR CONSTRUCTION PURPOSES
   MUST BE OBTAINED FROM FIRETROL OR THE LOCAL
   FIRETROL REPRESENTATIVE
- 10. SEISMIC MOUNTING TO BE RIGID WALL AND BASE ONLY

						RELEASED		•	-	CIR	CIR	11-5-19
ſ	1	SIZE A	BY	DATE		REVISION DESCRIPTION			ECN NO	BY	APP	DATE
	$\Rightarrow$	DRAWN BY	CIR	11-5-19	<b>Firetrol, Inc.</b>	DIMENSIONS & SHIPPING WEIGHT	FTA1000	DRAWING I	NUMBER 000-7	n		
	THIRD ANGLE		_ · · · ·			FULL VOLTAGE FIRE PUMP CONTROLL	FB.	וטטו	000-7	<u> </u>		CDL
		FINAL APPROVAL	CIR	11-5-19	© Firetrol, Inc. Not for construction. Subject to change without notice.	FULL VOLTAGE FIRE PUMP CONTROLL	.EK	DWG REV -	ECN -		SH	HEET 1 OF 1
_	All rights reserved. The	drawing and the in	nformation co	intained or depicted	herein are the sole property of Firetrol, Inc. Copies are communicated to the re	eclolent in strict confidence and may not be retransmitted, published, reproduced, con	oled or used in any manor, including as the basis for the manufacture or	sale of any produc	ts, without the exc	ress prior	written cor	nsent of Firetrol, Inc.

# Field Connections Alarm & Control Terminals



## MARKIII Electric Fire Pump Controllers - Across The Line Starting

#### Control Terminals (EB1) Remote Alarm Terminals (EB1) Terminals Wire Size: 24 - 12 AWG 0.5 Nm Terminals Wire Size: 24 - 12 AWG 0.5 Nm Normally open Closes to alarm Normally closed Opens to alarm Motor Run Remote Manual Start Close to start pump Normally open Ø NO Closes to alarm Normally closed Opens to alarm Normally open Closes to alarm Normally closed © c Ø NC Opens to alarm Lockout Close to block start Power Available Normally open Ø NO Closes to alarm Normally closed Opens to alarm Normally open 0 NO 0 C 0 NC Closes to alarm Normally closed Opens to alarm Open to start pump Remote Automatic Start Phase Reversal Normally open Closes to alarm Normally closed Opens to alarm Normally open Closes to alarm Normally closed Opens to alarm Ø NC Open to start pump J39 TB4 Pump Room Alarm \*\* Deluge Valve Normally open Closes to alarm Normally closed Opens to alarm Normally open Closes to alarm Normally closed Alarm Inputs (EB1) Opens to alarm J41 Motor Trouble \*\* Normally open TB5 Terminals Wire Size: 24 - 12 AWG 0.5 Nm Ø NO Normally closed Closes to alarm Opens to alarm Normally open 2 NO C NC Closes to alarm Normally closed Opens to alarm ' (Field Programmable \*\*\*) Water Reservoir Low Close to signal alarm Normally open Closes to alarm Normally closed Opens to alarm

#### Network Connection (VMB1)

Shielded Female Connector RJ45



<sup>\*</sup> Remove jumper to use this feature

Drawing for information only.

Manufacturer reserves the right to modify this drawing without notice.

Contact manufacturer for "As Built" drawing.

					RELEASED		-	-	CIR	CIR	11-11-19
	SIZE A	BY	DATE		REVISION DESCRIPTION			ECN NO	BY	APP	DATE
	DRAWN BY CIR 11-10-19	Firetrol, Inc.	FIELD CONNECTIONS	FTA1000	DRAWING						
THIRD ANGL	E DRAWN BY	CIR	11-10-19		FULL VIOLENCE FIRE BUILD CONTROLL	FC1	000-60	00-60		CDL	
PROJECTION	FINAL APPROVAL	CIR	11-10-19	© Firetrol, Inc. Not for construction. Subject to change without notice.	FULL VOLTAGE FIRE PUMP CONTROLLER			ECN NO -		SHEET 1 O	

 
<sup>\*\*</sup> Re-assignable \*\*\* Not available on FTA1930 models

## **Field Connections** Line & Motor Wire Terminal Capacity



## MARKIII Electric Fire Pump Controllers - Across The Line Starting

#### Line Terminals



- 1 For proper wire sizing, refer to NFPA70 and NEC (USA) or CEC (Canada) or local code.
- Controller suitable for service entrance in USA.
   For more accurate motor connections refer to motor manufacturer or motor nameplate.
- 4 Controller is phase sensitive. Incoming lines must be connected in ABC sequence.


#### **COPPER CONDUCTORS** for Isolating Switch (IS1).

 Field Wiring According to Bending Space (AWG or MCM). Terminals L1 - L2 - L3

Bending Space				5 " (1	27 mm)			8 " (203 mm)				
HP Voltage	5	7.5	10	15	20	25	30	40	50	60		
208	1x (10 to 1/0)		1x (3 to 1/0)	1x (2 to 1/0)	1x (1/0 to 250)	1x (3/0 to 250)	1x (4/0 to 250)					
220 to 240	1x (10 to 1/0)	1x (10 to 1/0) 1x (10 to 1/0)		1x (6 to 1/0)	1x (4 to 1/0)	1x (4 to 1/0)	1x (3 to 1/0)	1x (1 to 250)	1x (2/0 to 250)	1x (3/0 to 250)		
380 to 416	1x (10 to 1/0)	x (10 to 1/0)		1x (8 to 1/0)	1x (8 to 1/0)	1x (6 to 1/0)	1x (6 to 1/0)	1x (4 to 1/0)	1x (3 to 1/0)	1x (3 to 1/0)		
440 to 480	0 1x (10 to 1/0)		1x (10 to 1/0)	1x (8 to 1/0)	1x (8 to 1/0)	1x (6 to 1/0)	1x (6 to 1/0)	1x (4 to 1/0)	1x (3 to 1/0)			
600			1x (10 to 1/0)	1x (8 to 1/0)	1x (8 to 1/0)	1x (6 to 1/0)	1x (6 to 1/0)	1x (4 to 1/0)				

Bending Space		12	" (305 mm)		16 " (406 mm)									
HP Voltage	75	100	125	150	200	250	300	350	400	450	500			
208	1x (300 to 500) 1x (500) 2x (4/0 to 500) 2x (250 to 500)			2x (400 to 600)										
220 to 240	1x (250 to 500)	500) 1x (350 to 500) 2x (3/0 to 500) 2x (4/0 to 500)		2x (350 to 500)	2x (500 to 600)									
380 to 416	1x (1/0 to 250)	1x (3/0 to 250)	1x (250)	1x (300 to 500)	2x (3/0 to 250)	2x (4/0 to 500)	2x (300 to 500)	2x (400 to 600) 2x (400 to 500)	2x (500 to 600)	2x (600)				
440 to 480	1x (1 to 250)	1x (2/0 to 250)	1x (3/0 to 250)	1x (4/0 to 250)	1x (350 to 500)	2x (3/0 to 250)	2x (4/0 to 500)	2x (300 to 500)	2x (350 to 500)	2x (400 to 600)	2x (500 to 600)			
600	1x (3 to 1/0)		1x (3/0 to 250)	1x (250 to 500)	1x (350 to 500)	2x (3/0 to 250)	2x (4/0 to 500)	2x (250 to 500)	2x (300 to 500)	2x (350 to 500)				
Bending Space	5 " (127 mm)		8 " (203 mm)				12 " (3	05 mm)						

#### **Motor Terminals**




COPPER CONDUCTORS for Motor Connection (1M).
Field Wiring According to Bending Space (AWG or MCM). Terminals T1 - T2 - T3

	icid Willing According to Behaving opace (AWO or Wow). Terminals 11 12 15													
HP Voltage	5	7.5	10	15	20	25	30	40	50	60				
208	20 to 240		1x (6 to 2)	1x (4 to 1/0)	1x (3 to 1/0)	1x (2 to 1/0)	1x (1/0 to 3/0)	1x (3/0)	1x (4/0 to 300)					
220 to 240			1x (6 to 2)	1x (4 to 1/0)	1x (4 to 1/0)	1x (3 to 1/0)	1x (1 to 3/0)	1x (2/0 to 3/0)	1x (3/0)					
380 to 416			1x (10)	1x (8 to 2)	1x (8 to 2)	1x (6 to 2)	1x (6 to 1/0)	1x (4 to 1/0)	1x (3 to 1/0)	1x (3 to 1/0)				
440 to 480			1x (10)	1x (8 to 2)	1x (8 to 2)	1x (6 to 2)	1x (6 to 2)	1x (4 to 1/0)	1x (3 to 1/0)					
600	1x (14 to 10)	1x (14 to 10)	1x (14 to 10)	1x (10)	1x (10)	1x (8 to 2)	1x (8 to 2)	1x (6 to 2)	1x (6 to 2)	1x (4 to 1/0)				

HP Voltage	75	100	125	150	200	250	300	350	400	450	500
208	1x (300)	2x (2/0 to 300)	2x (4/0 to 300)	2x (250 to 300)	2x (400 to 600)						
220 to 240	1x (250 to 300)	2x (2/0 to 300)	2x (3/0 to 300)	2x (4/0 to 300)	2x (350 to 500)	2x (500 to 600)					
380 to 416	1x (1/0 to 3/0)	1x (3/0)	1x (250 to 300)	1x (300)	2x (3/0 to 300)	2x (4/0 to 300)	2x (300)	2x (400 to 500)	2x (500 to 600)	2x (600)	
440 to 480	1x (1 to 1/0)	1x (2/0 to 3/0)	1x (3/0)	1x (4/0 to 300)	2x (1/0 to 300)	2x (3/0 to 300)	2x (4/0 to 300)	2x (300)	2x (350 to 500)	2x (400 to 600)	2x (500 to 600)
600	1x (3 to 1/0)	1x (1 to 1/0)	1x (2/0 to 3/0)	1x (3/0)	1x (250 to 300)	2x (2/0 to 300)	2x (3/0 to 300)	2x (4/0 to 300)	2x (250 to 300)	2x (300)	2x (350 to 500)

						RELEASED		-	-	CIR	CIR	11-11-19
	THIRD ANGLE PROJECTION	SIZE A	BY	DATE		REVISION DESCRIPTION			ECN NO	BY	APP	DATE
١.					<b>Firetrol, Inc.</b>	FIELD CONNECTIONS	FTA1000	DRAWING	NUMBER			
Ι.		DRAWN BY	CIR	11-10-19	/ I I I I I I I I I I I I I I I I I I I	I ILLE CONNECTIONS	1 1/1000	FC1	000-6	10-61		
			10			FULL VOLTAGE FIRE PUMP CONTROLL	ED		000 0	<u> </u>		CDL
,		FINAL APPROVAL	CIR	11-10-19		LINE AND MOTOR FIELD WIRE TERMINAL CAPACITY			ECN -			HEET 1 OF 1
L		/ / / / / / / / / / / / / / / / / / / /		,	LINE AND WOTOR FIELD WIRE TERMINAL CAPACITY  chinal in sticl confidence and mound be extranomited mublished reproduced, contact or used in any manual includes as the basic for the manufacture.				rono nelor	uziton oor	soot of Eirotro	

## MARKIII Electric Fire Pump Controllers - Across The Line Starting

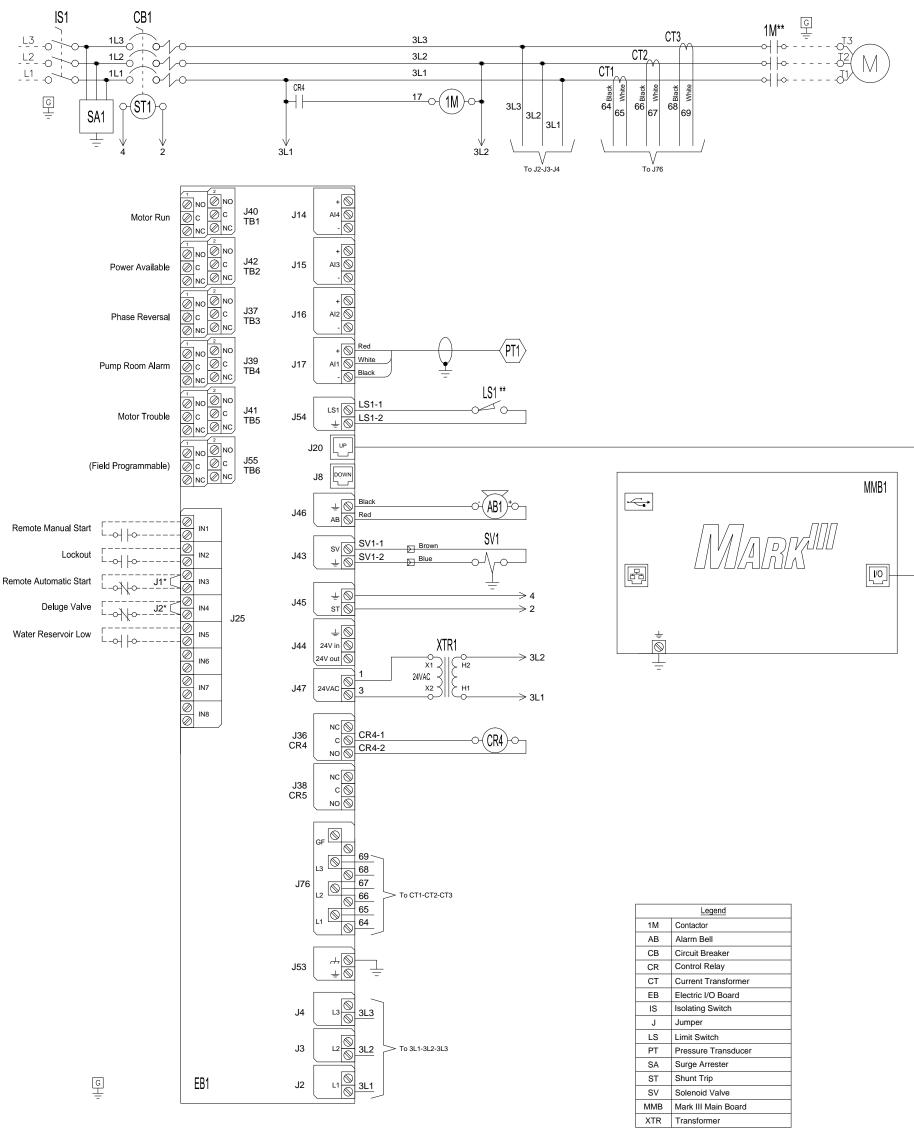


<sup>\*</sup> Remove jumper to use this feature

Drawing for information only.

Manufacturer reserves the right to modify this drawing without notice.

 Contact manufacturer for "As Built" drawing.



<sup>\*\*</sup> Contact closes when emergency start is in "ON" position